

LOCATION	PART NUMBER	DESCRIPTION
1	900-1906-98	Auger Bearing
2	900-1905-28	Q1 X 2" Bushing
3	900-1905-25	Auger Sprocket
4	977-000177	Auger Chain Guard
5	900-1905-27	P1 Bushing 1 – ¼" Bore
6	900-1905-26	H80 P11 Sprocket
7	900-1905-22	Idler Sprocket With Bearing
8	977-000154	80H Roller Chain
9	976-000847	Auger Hydraulic Motor Mount
10	900-3906-30	Auger Hydraulic Motor
11	976-050515	Auger Shaft
12	977-000106	Left Hand Auger Assembly
13	977-000107	Right Hand Auger Assembly
14	900-7900-32	Auger Plastic Bed Sheet