

CONTROLS

**MODEL 3680 BASIC LOCATION OF TETHER REMOTE CONTROLS
(FOR AUTO FEED BOX WITH A CLEAR FACE)**

1. Engine Shut Down Switch	4. Throttle Up & Down Switch
2. Infeed Conveyor Forward & Reverse Switch	5. Concave Door Open & Close Switch
3. Feedwheel Yoke Up & Reverse All Switch	6. Feedwheel Forward & Reverse Switch

