

Model 3680

Recycler Components

<u>LOCATION</u>	<u>PART NUMBER</u>	<u>Description</u>
9.	976-00969	Screen Location Indicator
10.	977-000282	Beltshield Tension Check Door Assembly
11.	977-000275	Base Side Cover Plate
12.	977-000106	Anvil
13.	977-000099	Anvil Mount Assembly
14.	976-030908	Concave Door Pin
15.	977-000074	Yoke Pivot Pin Assembly
16.	976-002739	Yoke Slide Glide
17.	976-040101	Roll Cover
18.	976-000181	Crash Bar
19.	977-000237	Yoke Lock Pin Assembly
20.	977-000283	Yoke Lock Base Assembly
21.	900-3902-60	Yoke Lock Cylinder
22 a.	900-3916-47	Yoke Lift Cylinder
b.	900-3911-49	Breather Fitting For Lift Cylinder
23.	900-3901-78	Slight Gauge
24 a.	980-0125-84	Hydraulic Tank Filler Cap Lock
b.	900-3907-66	Hydraulic Tank Fill Cap
25 a.	900-3910-31	Hydraulic Stop Block
b.	900-3910-32	12 Volt Solenoid On Stop Block
c.	900-3917-53	24 Volt Solenoid On Stop Block
26 a.	900-3901-66	Hydraulic Filter (LE-10 Micron Filter)

26 b.	900-3901-72	Double Filter Head
27.	900-3913-68	Moisture Control Insert
28.	977-000127	Battery Box Assembly
29.	900-9902-45	Automatic Fire Extinguisher
30.	976-010195	Yoke Lock Cover
31 a.	976-000176	Base Top Rubber Flap
b.	976-000194	Base Top Rubber Flap Mount
32.	977-000184	Feedwheel Mount Assembly
33.	977-000239	Idler Shaft Assembly
34.	976-002743	Plastic Yoke Arm Slide
35.	977-000278	Yoke Lift Safety Chain and Hook (Not Shown)
36 a.	977-000281	Beltshield Catwalk Assembly Only (Not Shown)
b.	977-000280	Beltshield Catwalk Assembly & Ladder(Not Shown)
37.	977-000279	Beltshield Catwalk Ladder Assembly Only (NS)
38.	976-001579	Beltshield Catwalk Hand Rail Assembly (NS)
39.	900-2906-48	Screen Assist Winch (Not Shown)