

UPPER DISCHARGE CONVEYOR

LOCATION	PART NUMBER	DESCRIPTION
1	900-1906-53	Troughing Roll Clip
2.	977-000062	Shaker Roll Assembly
3.	900-1901-08	Bearing For shaker Roll
4.	976-000425	Stainless Steel Chute
5.	977-000040	Upper Section Assembly
6.	977-000065	Right Side Magnetic Roller Head Mount
7.	900-1905-10	Magnetic Roller Head Bearing
8.	976-000408	Lee-Tight Coupler
9.	976-001647	Torque Arm
10.	900-3906-24	Magnetic Roller Head Hydraulic Motor
11.	900-1906-14	Side Guide Roller
12.	976-030426	Shaft For Magnetic Head
13 a.	977-000101	Magnetic Roller Head
b	977-000102	Non-Magnetic Roller Head
14.	977-000064	Left Side Magnetic Roller Head Mount
15.	900-1905-98	Troughing Roll Assembly
16.	976-000499	Belt Guard
17.	900-9902-04	Single Troughing Roll
18.	977-000181	Chains With Hooks For Stainless Steel Chute (Not Shown)
19.	900-1905-60	Discharge Belt (Not Shown)

